


MANUAL

Beamax M-series

A: Mountingplate with screw

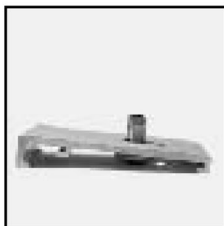

B: Mountingplate with washer and nut. Do not tighten completely



C: Attach mountingplate



Introduction

Thank you for buying a Beamax M series projection screen. Just like you, we set high standards for our products. We therefore hope that you will enjoy your screen for many years to come.

To ensure maximum pleasure and a long service life of the screen, please read through all of this manual carefully.

We wish you happy viewing for all your projection applications.

Reservation

Guarantee

The guarantee cover on the Beamax M-series is 2 years. The guarantee ceases to apply if the screen is not installed correctly, opened, or used for any purpose other than that for which it is designed.

Electrical installation should be carried out by an electrician. The guarantee is likewise forfeited if the seals are broken or if the screen is opened.

Projection

Projection quality depends on many factors and will vary in different surroundings. Beamax cannot offer any guarantee regarding perceived projection quality.

Changes may be made without prior notice.

Included

1. Beamax M-series projection screen with matte white screen fabric
2. M series manual
3. 1 bag with fitting material and electric switch

Fitting material:

- Control switch (2 parts)
- Mounting plate
- Safety fitting for mounting plate
- Wall-mounting support
- Ceiling-mounting support
- Screws, nuts and washer

Materials and tools

Tools:

- Hammer
- Open-ended spanner or wrench
- Screwdriver
- Power drill

Equipment:

- Screws with dowels (not included) for wall- or ceiling-mounting
- Electricity cable with plug (not included) for connection of the screen to the mains power supply

Setting up the screen

General tips for setting up:

- First check that the product is undamaged and delivered complete before installing the product.
- The screen must be returned if the cable is damaged.
- Consult your dealer if you are unsure.
- Check that it is possible to set up the screen in the required place. Remember to allow for the load-bearing capacity of the wall and the mounting points.
- Check that the bottom of the screen is sufficiently high (between 100 cm and 125 cm from the floor). This ensures optimum viewing pleasure.
- Set-up is generally faster and easier with 2 persons.

Mounting

1. Decide the correct hanging points for the wall supports or ceiling supports. Fix the supports to the wall or to the ceiling.
2. Take the mounting plates and lay them with the flat side facing up. Insert a screw into the hole from underneath.
3. Place a washer and then a nut on the screw and tighten with no more than 3 turns. Do not tighten completely!
4. Secure the mounting plates at their correct positions on the tube (to match the mounting points in the ceiling) and hook behind the rail running along the top of the tube.
5. Fix the mounting plates with the small white locking pins. Tap these firmly into place with a hammer.
6. Now slide the screen on to its hanger supports and tighten the nuts completely.
7. The screen is now ready to use.

Connection plan:

Use the following plan to connect your screen. Beamax recommends that you arrange for this job to be done by a qualified electrician.

NB: if you have bought the optional remote control, follow the connection plan as indicated in the remote control manual.

Screen cable:

Brown: 4

Black: 3

Yellow/Green: Yellow/green lighting mains cable connection via connector block

Blue: Blue lighting mains cable connection via connector block

Lighting mains cable:

Brown: 2

Yellow/Green: Yellow/green screen cable connection via connector block

Blue: Blue screen cable connection via connector block

Connection plan:

