

ADJUSTING **M-COMPACT/R-BLACK** ELECTRICAL SCREENS




When adjusting the drop of your M-Compact or R-Black electrical screen, it is in fact the motor of your screen that is being adjusted to let the screen roll up and down to a desired position.

This can be done by turning the **2 Allen-screws on the bottom lefthandside** of your electrical screen.

We will refer to them as a **front screw** and **back screw**.

You will need a **4mm Allen key** to turn the screws.

ADJUST THE SCREEN WITH THESE SCREWS.
- USE A 4 MM ALLEN KEY
- 1 ROTATION EQUALS 1 INCH (2,5 CM)

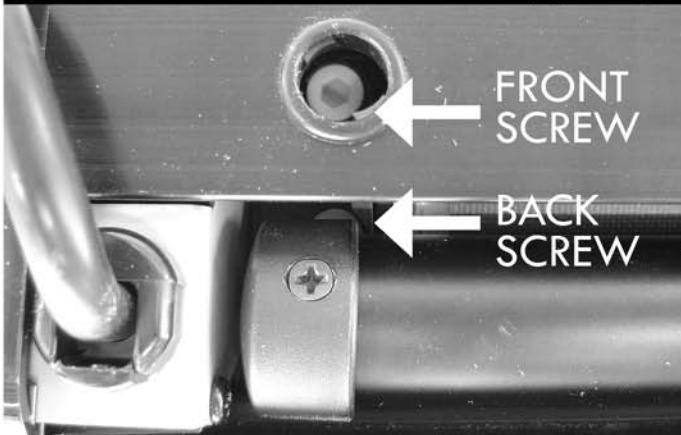

Adjusting the screen rolling in:

Use the back screw and turn it left to make it roll in more.
Turn it right to make it roll in less.

Adjusting the screen rolling out:

Use the front screw and turn it left to make it rollout less.
Turn it right to make it roll out more.